

Instruction Manual for The EDGE Topper by
KRONIC KUSTOMS










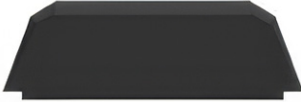


Please read the instruction manual carefully to avoid
damaging parts or vehicles.

Installation Manifest


- The following is a list of installation checklists for this product.
- Please check the number of parts with this list carefully.



Name of Parts	Photo	Quantity
Front		1
Hatch		1
Left Panel Door		1
Right Panel Door		1
M8 16mm Asst. Hex Bolts/Screws		45 (Total)
M8 26mm Hex Bolt/Screw		12
M8 30mm Hex Bolt/Screw		12
M8 Nuts/Washers		75/ea.
T-slot cleats		12
Mounting Plates		6

Installation Steps

- o Main structure installation procedure

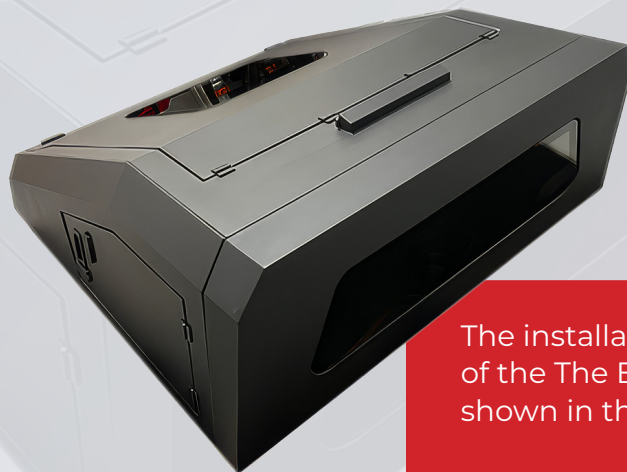

The installation direction of the The Edge Topper is shown in the figure.

The product can adjust itself according to the degree of coordination

Step 1:

Attach the side panels to the Hatch Door.

First, place the Hatch so that the inside of the door is facing up.



Next, attach door panels to each side.



Next, attach the Front to Side Panels and the Hatch.

Step 2:


Tape liner on the bottom

(to prevent friction between sheet metal and body)



When the main body installation is complete, use type B rubber stipe on the bottom of the topper.

(See figure below)

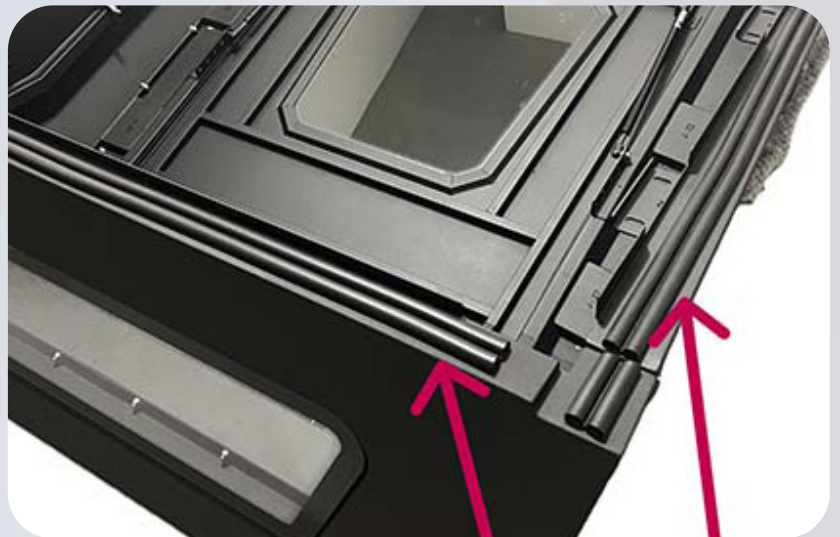

Step 3:

Apply a bead of silicone caulk to Seams


Apply the caulk to all the seams where the Side Panels and the Front join with the hatch.



Step 4:

Vehicle Installation

First, we will place the T-slot cleats into the Bed Rail and position it.

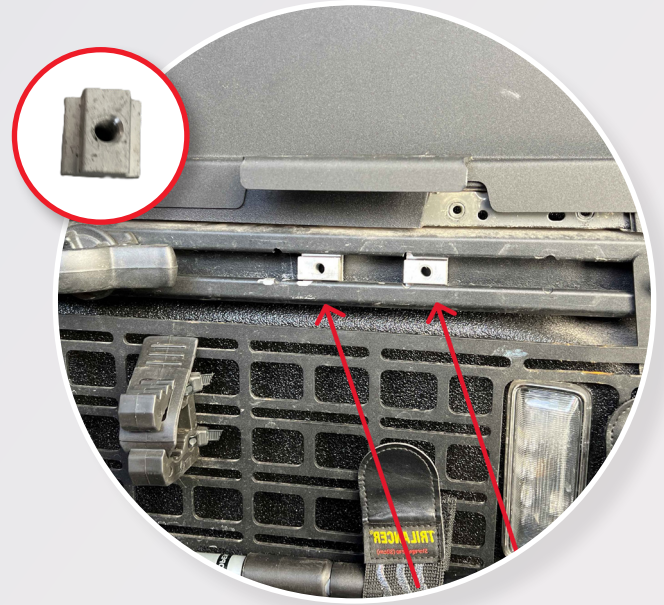

Next, install the snap-on brackets.

Secure with the M8 type hex screw and anti-release nuts to the T-slot cleats in the Bed Rail.

Finally, position the snap-on bracket and attach to the Topper bracket with the M8 type hex bolt.

